

Bermad Single Interlock Pre action Electric Release System

Model: 400E-7M

INSTALLATION OPERATION MAINTENANCE



1. Safety First

BERMAD believes that the safety of personnel working with and around our equipment is the most important consideration. Please read all safety information below and from any other relevant source before attempting to perform any maintenance function.

Comply with all approved and established precautions for working with your type of equipment and/or environment.

Authorized personnel should perform all maintenance tasks.

Prior to performing a procedure, read it through to the end and understand it. If anything is not clear, ask the appropriate authority.

When performing a procedure, follow the steps in succession without omission"

2. Description

The Bermad 7M Single-Interlock Pre action System is best suited for water-sensitive areas that require protection against false actuation. Single-Interlock systems are defined as systems that admit water to sprinkler piping upon operation of detection devices.

The system include a Bermad Water Control Valve with Single-interlock control trim, attached to dry sprinkler piping system with automatic sprinklers and a supplementary electric detection system installed in the same area (as defined by NFPA 13).

The Bermad Water Control Valve remains locked by water trapped in the control chamber. The closed valve prevents unintentional water flow into the sprinkler-system piping.

To flow water into the sprinkler piping system, the fire-detection device must be activated, operating the releasing Control Panel, which energizes the Solenoid Valve, causing the Bermad Water Control Valve to open and allow water flow into the piping system.

The Single-Interlock Pre action Systems are mostly used to protect areas where accidental water release may cause considerable damage to property, such as computer & electronics rooms, libraries, museums & archives, telecommunication equipment, cable spreading rooms, oil-filled-transformer rooms.

This Bermad Valve is equipped with an Easy Lock Manual Reset (M) (EMR) device, which locks it into an open position during system activation. The Water Control Valve is operated by an electric Solenoid Valve, Low Air Pressure Switch and requires a listed System Control Panel with a compatible electrical fire detection system.

Warning: Whenever either the Solenoid or the Manual Emergency Release (15B) is activated, the EMR locks the Bermad Water Control Valve in its open position. The Bermad Water Control Valve will close again only when the - reset button on the EMR is pressed.

NOTE: According to the NFPA-13, Single interlock may or may not be pneumatically supervised.

- Unsupervised Systems - include a piping system that is vented to the atmosphere through an automatic drip-check, downstream of the main Pre action valve, and triggers an alarm only upon water flow entering the sprinkler piping, as the main Pre action valve opens.
- Supervised System requires a low-pressure pneumatic supply and an additional listed in line check valve, downstream of the main Pre action Valve. This creates a supervised piping zone or monitored chamber, with a supervisory low-pressure switch.

3. UL Listed

BERMAD 400E-7M Deluge Valve is UL Listed when installed with specific components & accessories. Refer to the current UL Directory. Consult the manufacturer for any component approval recently to appear in the UL fire protection equipment directory.

4. Installation

NOTES:

Any deviation in trim size or arrangement may adversely affect the proper operation of the Preaction system.

All initiating devices (detectors), indicating appliances, automatic sprinklers, as well as the Releasing control panel, must be compatible and UL listed for use with the particular Sprinkler System. Refer to current "UL Listed Fire Protection Equipment Directory". Refer also to NFPA 13 or the applicable installation standards, codes and authorities having jurisdiction.

Installation Instructions

- 4.1 Allow enough room around the valve assembly for any adjustments and future maintenance/disassembly work.
- 4.2 Before the valve is installed, flush the pipeline to remove any dirt, scale, debris, etc. Not flushing the line may result in the valve being inoperable.
- 4.3 Install the valve in the pipeline with the valve flow arrow on the body casting in the proper direction. Ensure that the valve is positioned so that the cover/actuator can be easily removed for future maintenance.
- 4.4 Ensure that the EMR is Mounted Vertically (with the reset button up), and all other components are positioned correctly as per the appropriate drawing.
- 4.5 Install a Listed Indicating Valve upstream of the Pre action System (supervised "open").
- 4.6 Install also another Listed Indicating Valve downstream of the Pre action System (supervised "open") to shut off and isolate the sprinkler piping in order to allow water flow testing and maintenance.
- 4.7 The water supply priming line must be connected to the upstream of the main isolating valve.
- 4.8 Subject to all other instructions, drawings and technical specifications, which describe Bermad Valve, install in their proper positions the components comprising the Water Control Trim Package, according to the drawing relevant to the specific type, hereby enclosed.
- 4.9 Install also the additional accessories, which appear in the drawing and which must be installed as shown in the drawing, although they are not packed together with the Bermad Valve itself.

Electrical Requirements

All releasing and detection devices in the Single-interlock system shall be controlled by a releasing Control Panel. Wire all connections according to information and detailed wiring diagrams in publications provided by the Releasing Control Panel manufacturer.

All system isolating valves must be equipped with a supervisory switch to monitor the normally open position. The switch must be wired to the Control Panel.

The Power Supply, the Standby Emergency Power Supply, the Battery Charger and the Rectifier circuitry are all contained within the Control Panel.

Standard Solenoid Valve Data (others are optional):

- Voltage: 24VDC
 - Normally Position: NC
 - Enclosure Type: 1,2,3,3S, 4 and 4X/IP-65 (For Hazardous Locations enclosure, see catalog)
- Electrical Rating: 10.6 Watt / F (0.44 Amp) or less

Air-Pressure Requirements (only when air supervised system is required)

Supervised Pre action systems require a minimum of 0.5 bar (7 psi) pneumatic pressure to regulate the sprinkler-piping network. The system shall maintain a pneumatic pressure between 0.5-0.7 bar (7-10 psi) requiring a dry nitrogen-gas supply or a clean, dependable and continuous compressed-air source using an independent air compressor or an Air Maintenance Device supplied by an external high pressure source.

The Low-Pressure Alarm Switch (P2 - optional) is factory-set to operate at 0.4 bar (6 psi) with decreasing air pressure. If necessary, adjustments can be made by following the manufacturer's instructions.

NOTE: In refrigerated areas, the air's dew point must be maintained below the lowest ambient temperature to which the Single-Interlock System's piping might be exposed. Introducing moisture into system piping exposed to freezing temperatures can create ice blockage, which could interfere with the system's correct operation. At the least, the air supply should be taken from refrigerated areas at the lowest system temperature. The air supply must be carefully regulated to prevent plugging by frost deposits.

Temperature Considerations

The Water Control Valve, all interconnecting water piping and trim components must be installed in an accessible, clearly visible area maintained at a minimum temperature of 4°C.

NOTE: The Water Control Valve must be installed only in areas where it will not be subjected to freezing temperatures. No heat tracing is allowable for the Water Control Valve or for interconnecting piping.

Avoid situations in which the dry sprinkler network is exposed to extreme temperature variations. A rise in the temperature of the compressed air might increase pressure to more than that recommended

5. Equivalent Length

Water Control Valve Equivalent Length Value (Steel Pipe), for use in hydraulically calculated systems

Valve Size	Equivalent Length Value Meter (Ft)
2"	9.1 (30) of 2" pipe
2½"	12.1 (40) of 2½" pipe
3"	13.7 (45) of 3" pipe
4"	14 (46) of 4" pipe
6"	27.4 (90) of 6" pipe
8"	45.7 (150) of 8" pipe
10"	108 (354) of 10" pipe

Model: FP 400E-7M

Sizes: 2"-10"


Figure 1: Installation Drawing

Components

- 1 - Main Valve, BERMAD 400E Series
- 2A - Gauge Valve
- 3A - Pressure Gauge
- 4B - Priming Strainer
- 5A - Drain Valve
- 14B - Solenoid Valve
- 15B - Manual Emergency Release
- 18B - Priming Ball Valve
- 19B - Drip Check
- H - In-Line Swing Check Valve
- M - EasyLock Manual Reset

Optional

- P - Pressure Switch

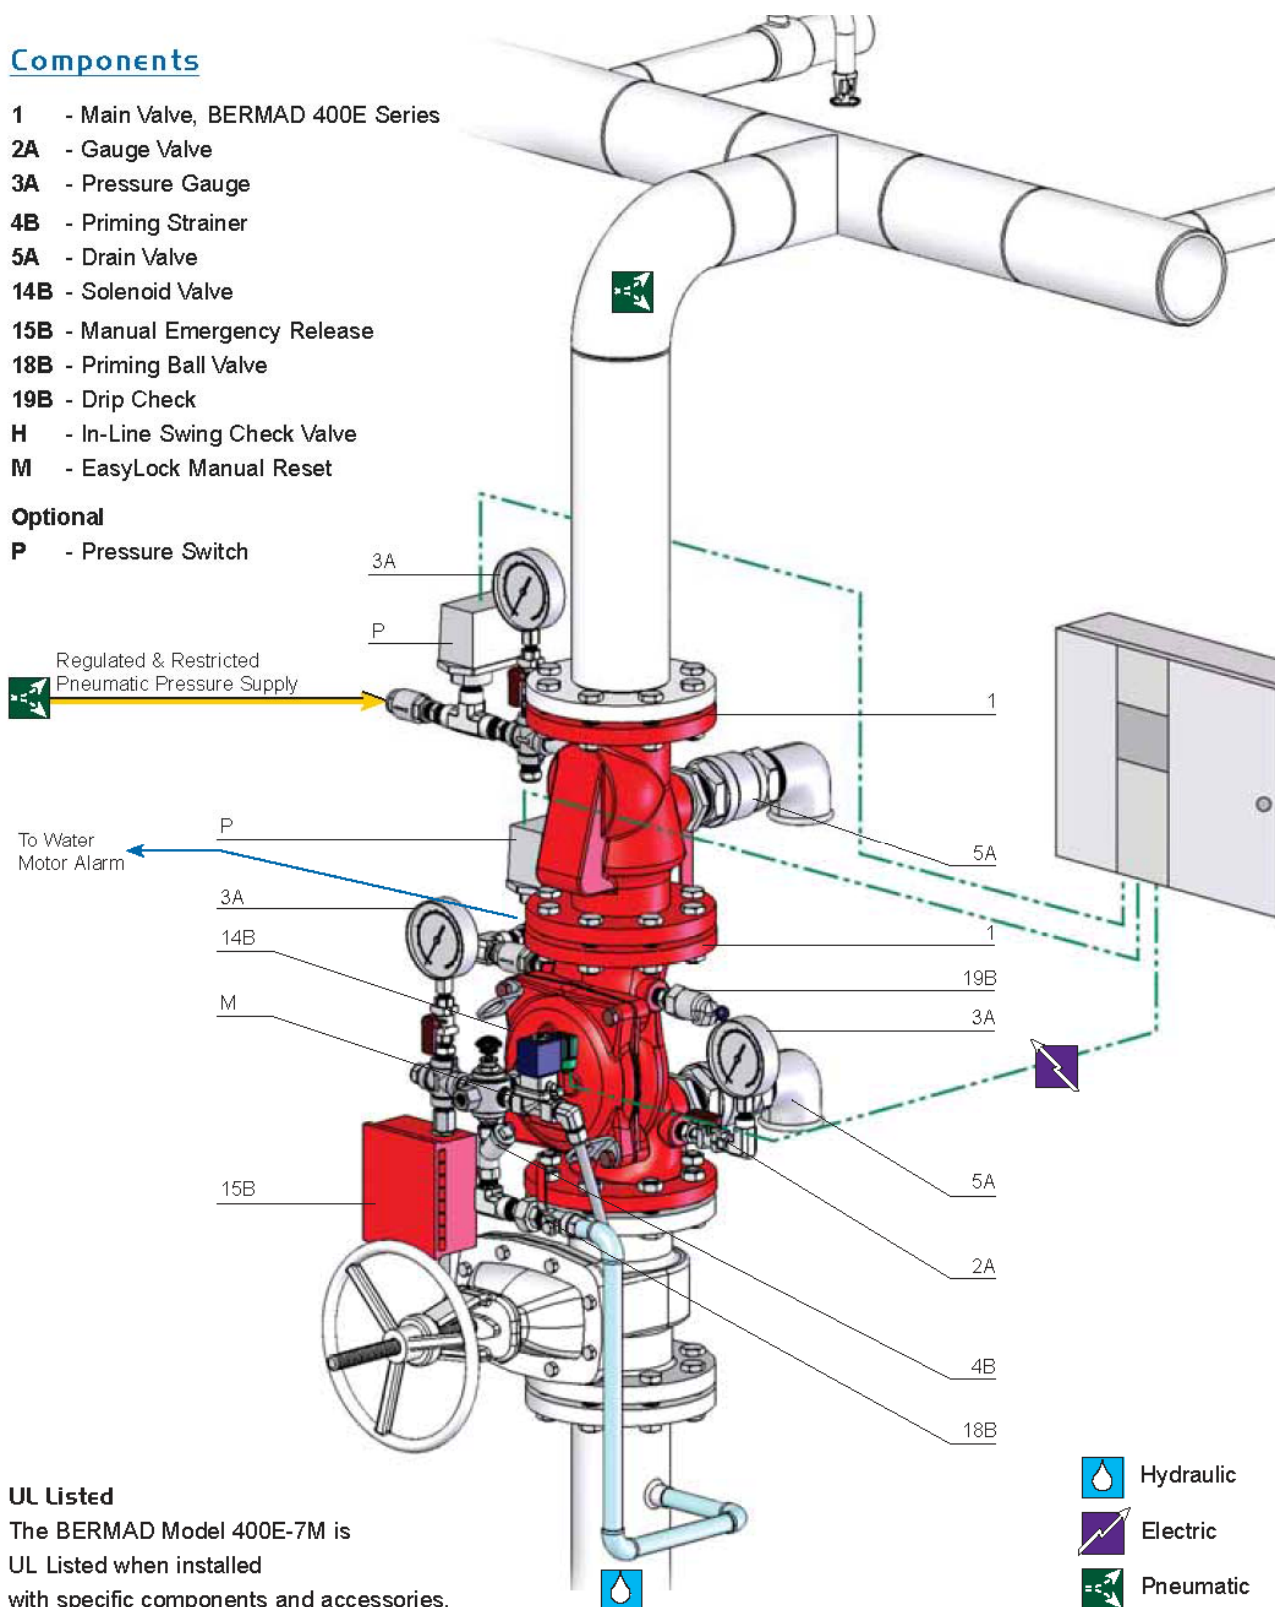

UL Listed

The BERMAD Model 400E-7M is
UL Listed when installed
with specific components and accessories.

6. Optional Equipment

Provide for a Water flow Alarm Pressure Switch (P), (Model PS-10 or PS-40) to either activate an electric alarm, or shut down desired equipment.

For the air supervisory requirement, order and install a suitable air compressor, nitrogen or an air maintenance device, See *System Air Pressure Requirements*; also provide Low-Air Pressure Switch (P2), (Model PS-10 or PS-40) to supervise the air pressure maintained in the sprinkler-piping network. For over 16 m3 (4000 gallon) volume of sprinkler piping network, it is recommended to install an Air Release Accelerator, consult Bermad for appropriate device.

If required, provide a Water Motor Alarm, it shall be assembled and installed according to instructions with in it's package.

7. Placing in Service/Resetting the System

- 7.1 Place the Detecting System's circuit in service and test regulatory circuits in the Release Control Panel, locating and replacing any faulty items. Test supervisory circuits in releasing control panel.
- 7.2 Apply supervisory air pressure to the system's piping and set the pressure at 0.6 ± 0.1 bar.
- 7.3 De-energize the Solenoid Valve (14B) by resetting the Electric Control Panel.
- 7.4 Close all emergency release valves.
- 7.5 Close All Drain Valves (5A & 5H).
- 7.6 Open the priming-line valve (18B), push and hold the EMR's reset button, this allows upstream water pressure to fill the Water Control Valve's control chamber.
- 7.7 When the control chamber pressure gauge (3A) indicates full upstream pressure and is no longer rising, the release system is reset.
- 7.8 Slowly Open the supply Isolating Valve and check that no water flows into the system.
- 7.9 Depress the Drip-Check (19B) and drain any water from the downstream side of the valve.
- 7.10 Test settings for the Low Air-Pressure Switch (P2) by releasing air from the Sprinkler Test Valve or gradually open the Sprinkler-System Drain Valve (5H). The Low Air-Pressure Switch should be set to operate at 0.4 bar (6 psi).

The system is now operational and in a standby mode.
Ensure that the following Set Conditions are met.

Set Conditions (Normal Conditions)

Item	Status
All Main Isolating Valves	OPEN and sealed with tamperproof seals
All Manual Releases	CLOSE position and sealed
Alarm Shut-Off Valve (11A)	OPEN position
Priming Ball Valve (18B)	OPEN
Control-Chamber Gauge	OPEN gauge valve, the Pressure Gauge indicates rate of pressure in Control-Chamber
Upstream Pressure Gauge	OPEN gauge valve, the Pressure Gauge indicates the upstream supply pressure to the Water Control Valve
Drip-Check Device (19B)	VENTED : Push the knob to confirm that there is no leakage.
Control Panel & Detections	Are in service and its stand-by position.
Supervised Air System	The Pressure Gauge shows ± 0.5 to 0.7 bar (7-10 psi). There are no air leaks.
Releasing Devices	CLOSED with no leaking

8. Removing the System from Service

WARNING: When taking the Pre action System and its sprinkler network out of service, a roving fire patrol should survey the system area. If automatic fire-alarm equipment is in use, the proper authority should be notified that the system is being removed from service. The insuring body and owner representative should also be notified when the system is being taken out of service.

9. Removing Instructions

- 9.1 Shut off the main supply-isolating valve.
- 9.2 Close the pneumatic pressure supply to the system.
- 9.3 Close the Priming line valve (18B) to Bermad Valve Control chamber.
- 9.4 Open all drain valves (5A & 5H).
- 9.5 Release the water pressure from the control chamber of the Water Control Valve by pulling the Manual emergency release (15B).
- 9.6 If auxiliary power is used, disconnect all power supply and batteries.
- 9.7 Place "Fire Protection System out of Service" signs in the area protected by the system.

10. Operation

In the SET position, the line-pressure supplied to the main valve's control chamber via the priming line and through the EMR, is trapped by the EMR's internal check valve, by a closed 2-Way Solenoid Valve (14B), and by a closed Manual Emergency Release (15B). The trapped pressure holds the main valve's diaphragm and plug against the valve seat, sealing it drip-tight and keeping the Bermad valve downstream side dry, the valve's downstream outlet is vented into the atmosphere by the Drip-Check Device (19B).

Air or Nitrogen pressure is maintained in the sprinkler piping and trapped in the system by the in-line Listed Swing-Check Valve at a minimum of 0.5 bar (7 psi) ensuring that the piping and sprinklers are still closed and sealed.


If the system piping is ruptured or a sprinkler head is accidentally opened, the low-pressure switch operates and an alarm is activated. Nevertheless, the Bermad Water Control Valve does not allow any water flow, as the de-energized Solenoid Valve remains closed due to the Releasing Control Panel design. If a fire-detection device is accidentally triggered, the Control Panel activates an alarm. Nevertheless, the Water Control Valve is not released to permit any water flow, as the Solenoid Valve remains closed due to the Releasing Control Panel design.

The requirement to activate both the Fire Detection Device and loss of air pressure before the Bermad Water Control Valve releases water assures maximum protection against unintentional water flow.

In the FIRE condition, when both the heat-detection system and the Automatic Sprinkler Head are activated, pressure is released from the Control Chamber by means of the energized Solenoid Valve. The Bermad Water Control Valve then opens and allows water to flow into the system piping as well as to the alarm devices. Water flows and sprays out of any open sprinkler in the system. The EMR prevents line-pressure from entering the control chamber, latching the main valve open.

WARNING: Whenever the handle of the Emergency Manual Release (15B) is pulled, the Bermad Valve opens, and water flows into the system's piping and to the alarm devices, the Valve will close again only when the handle of the Emergency Manual Release is returned to its original position and the reset button on the EMR is manually pressed.

11. Figure 2: Operation Drawing

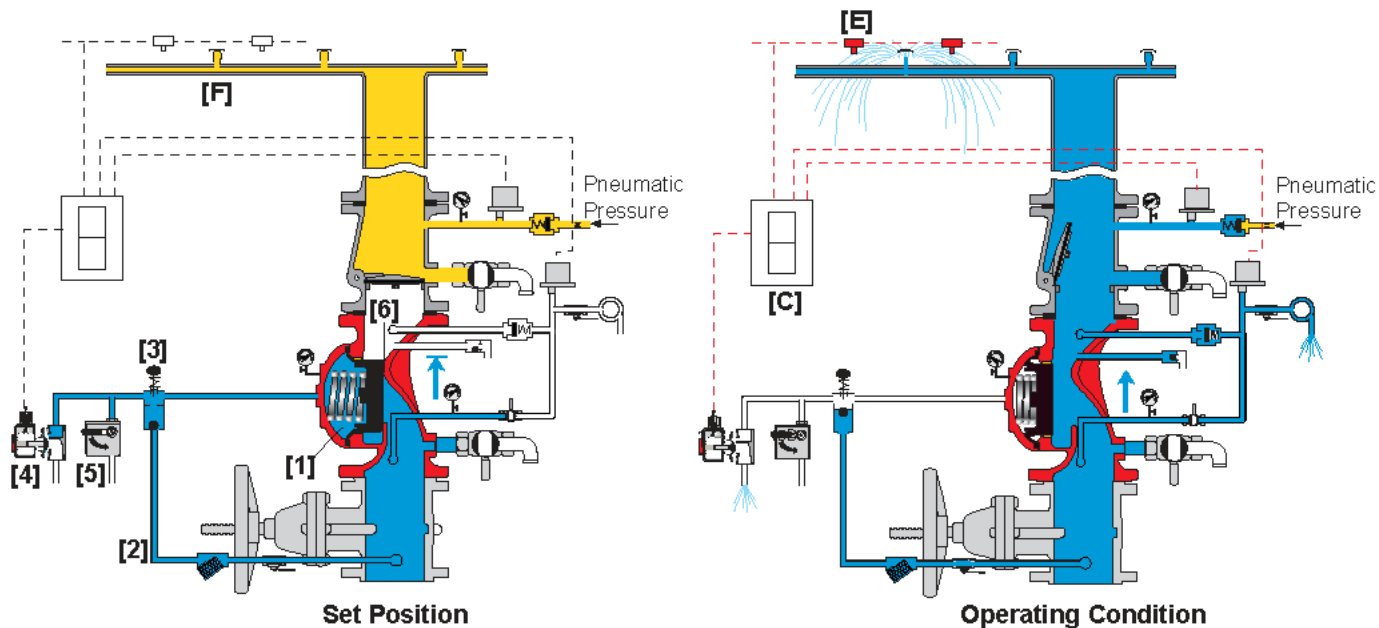

12. Maintenance and Inspection Test

WARNING: Do not turn off the water supply to make repairs without placing a roving fire patrol in the area covered by the system. The patrol should continue until the system is back in service.

- 12.1 Prior to turning off any valves or activating any alarms, notify local security guards and the central alarm station, if used, so that a false alarm will not be signaled.
- 12.2 In any of the following inspections or testing procedures, if an abnormal condition exists, see Abnormal Conditions for possible cause and corrective action.
- 12.3 See NFPA Pamphlet No. 25 and also relevant publications by authorities having jurisdiction.

13. Weekly Inspection

- 13.1 The system should be checked for Set Condition. See above "Set Condition (Normal condition)".
- 13.2 Verify that the upstream Pressure is within the normal operating range.

14. Monthly Inspection and Test

- 14.1 Complete Weekly Inspection.

WARNING: Manually activating the alarm affects the Control Panel, which in turn can cause a general alarm. Take all of the necessary precautions in order to prevent causing a general false alarm.

- 14.2 Test the Electric Alarm Bell and the Water-Flow Alarm (if installed) by turning the Alarm-Test Valve (1A) to the open position. The alarm should sound.
- 14.3 Depress the Drip Check (19B) to release any accumulation of water. The dripping should stop completely.

15. Semi-annual Inspection

- 15.1 Complete Weekly and Monthly Inspection and Test.
- 15.2 Inspect the electric detection system and electric release control panel, as suggested by the release control panel manufacturer.

16. Annual Inspection and Test

- 16.1 Complete Weekly, Monthly and Semi-Annual inspections.
- 16.2 Close the Sprinkler-System Isolating Valve, to isolate the sprinkler system.
- 16.3 The Water Control Valve trim, releasing devices such as Solenoid Valve and manual release must be activated at full flow.
- 16.4 Trip test the Pre action System with the Control Panel. Operate the detecting system by operating both the Heat Detectors and the Low-Pressure Switch (P2). The release should be tripped according to the method suggested by the manufacturer of the Control Panel. Observe upstream Pressure Gauge while full flow is on.
Note: Water will be discharged to the drain. In cases where a Sprinkler- Piping Isolating Valve is not installed, another arrangement must be made in order to perform the trip test without causing water damage.
- 16.5 Place the system out of service. (See instructions above).
- 16.6 Clean the priming strainer (4B) prior to resetting the Water Control Valve.
- 16.7 Place the system back in service (See instructions in the section "Placing the System in Service").
- 16.8 Take all additional measures as required by NFPA-25 "Standard for the Inspection Testing and Maintenance of Water-Based Fire Protection Systems".

Every Five Years

During every fifth Annual Inspection, Open and clean the interior of the Water Control Valve and System Check Valve.

Replace all Elastomers with original manufacturer's spare parts.

17. Abnormal Conditions

17.1. Alarm Pressure Switch Fails to Sound

- A. Check for obstructions in the alarm test line.
- B. Clean the alarm-line strainer (if a water motor alarm is installed).
- C. Make certain the alarm is free to operate.
- D. Test the electrical circuit to the electric alarm (if utilized).

17.2. False Trip

- A. Check and test the electrical circuit to the Solenoid Valve (14B)
- B. Check for Malfunctioning EMR device.

17.3. Leakage through the Water Control Valve

- A. Check for clogged priming strainer (4B).
- B. Leaking control trim system
- C. Damaged deluge valve internal elastomer or seat.

17.4. Water Control Valve Will Not Reset

- A. The EMR Device is clogged or not reset properly
- B. Check for clogged priming strainer (4B), the screen should be properly cleaned.
- C. Closed priming valve (18B).
- D. Check for Foreign object lodged between seal and valve seat.
- E. Control Panel is not reset. Check for Faulty circuits, using manufacturer instructions.

17.5. Difficulty in Performance

Where difficulty in performance is experienced, the manufacturer or his authorized representative should be contacted if any field adjustment is to be made.